


46-RARJ Installation Guide

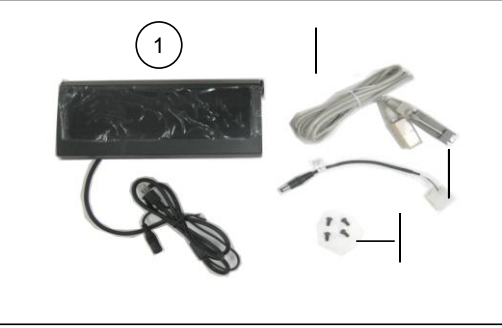

Package overview :

1. Rear Display [#46-RARJ-ADX] ----- 1 pcs
[#46B-RARJ-ADX]
2. RJ45 female - DB9 female extension adapter cable --- 1 pcs
[#30-326G06]
3. Power converter cable [#34-319-122155] ----- 1 pcs
4. Screw 4 x 8 [#10-S4008BB] ----- 4 pcs

I. Install to Stealth TOM-M5 (use item 1, 2, and 4 from the package)

File update: 20080314



1. Tilt terminal, and pull the back cover upward to open



2. Install the rear display to the unit, secure with 4 screws [item #4] (arrows).



3. Remove plastic cover from power connector (circle).




4. Connect the power cable (arrow).
5. Connect the adapter [item#3] to extension cable [item#2] (arrow).
6. Connect the serial cable to PC (arrow)




7. Cut the cable slot (see arrow).
8. Close the base.


II. Install to StealthTouch - M5, M5-LX and S-Line (use item 1, 3 and 4 from the package)




1. Tilt terminal, and pull the back cover upward to open

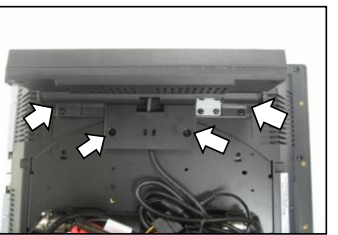


2. Install the rear display to the unit, secure w/ 4 screws [item #4] (arrows)

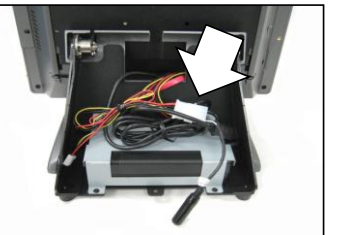


3. Connect power converter [item #3] to the power cable (arrow)

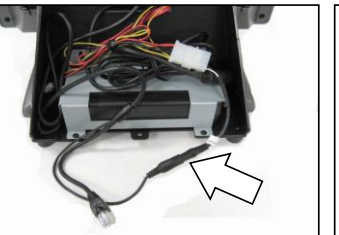


4. Connect power cable of the rear display (arrow).




5. Tilt the unit and remove the I/O cover (arrow)




6. Route the display cable to the front

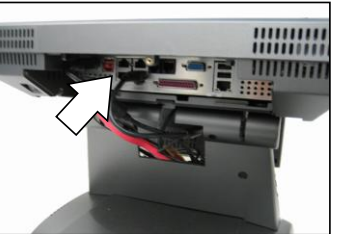


7. Connect to serial cable to COM port



8. Install the I/O ports.

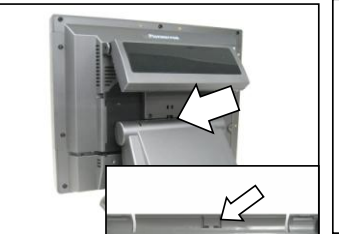

9. Cut the cable slot. (see arrow)



10. Close the back cover.